



**RB-B6SD**

**蒸氣消毒烘乾機**

**Steam Sterilizer & Dryer**



僅適用於家庭使用  
For household use only

## 使用說明書

## OPERATION MANUAL

- 在使用本產品前，請仔細閱讀本說明書，閱讀後小心收藏，以備日後查閱。
- Please read the operation manual carefully before using and keep it in a safe place for future reference.
- 本說明書中的圖示可能有與實物不同的地方，僅供參考。
- Some figures in the manual may not match with the real object, just for reference only.



非常感謝您選購樂信牌產品，使用前請先詳細閱讀本說明書，並保存以備日後參考。


## 目錄

1. 安全注意事項
2. 清潔及儲存
3. 產品規格
4. 產品說明
5. 使用方法
6. 故障排除
7. 特別聲明
8. 售後服務



## 1. 安全注意事項










使用本產品時，必須遵守下列安全措施：






下圖表示由於錯誤操作而引起不同程度的危險等級。

 <b>警告</b> 此標誌表示可能造成傷亡。	 <b>注意</b> 此標誌表示可能造成傷害或財產損失。
---	--












以下不同標誌區分各種必須遵守的指示。






 此標誌表示禁止。	 此標誌表示必須遵守。
---	---

 <b>警告</b>	
	為免危險，產品只適用於本說明書所註明的用途。切勿將產品或任何部份在室外使用或作其他用途使用。如錯誤操作，可造成傷害。
	切勿讓兒童清潔及保養產品，除非兒童是年齡在 8 歲以上及監督的情況下。監督兒童不可玩耍器具。將產品及其電源線放於 8 歲以下兒童不能接觸的地方。
	使用前，確保電源線插頭已分別插穩在電源插座上。
	切勿讓產品在無人看管下運作。
	切勿以其他物品代替原裝烘乾支架，以免造成危險。
	產品使用後必須清潔。切勿把產品、電源線或插頭浸入水中；或被水濺濕，以免造成觸電及火災。
	手濕時切勿接觸、插入或拔除插頭，否則可構成觸電的危險。
	使用時或剛使用後，切勿將臉或手靠近蒸氣口，以免造成燙傷；切勿觸摸剛使用後的加熱部件表面，因仍有餘熱。

	此產品只可作家庭使用及類似環境使用，如商店內部、辦事處和其他工作環境的員工廚房區域；旅館、汽車旅館和其他住宿類型的環境。
	切勿擅自改裝本產品或使用非生產商提供的零件進行修理，否則可造成危險及維修保養無效。
	務必確保本產品標籤上規定的電壓與您的本地電壓一致。並避免將其他裝置的電源插頭插入同一個電源插座，以防電路過熱。
	此產品可供年齡在 8 歲或以上的兒童及體質、感覺或智力有障礙人士或缺乏經驗和相關知識的人士使用，但他們必須接受負責安全人士的監督或指導如何安全地使用產品和理解所涉及的危險。
	經常檢查本產品、電源線及插頭，如有損壞，為避免危險，立即停止使用，並聯絡信興電器服務中心有限公司安排檢查及維修。

## 注意


	使用產品前，確保電源線是完全鬆開的。切勿與其他高功率的電器共用同一插座、超額使用電線拖板，以免電力負荷過重及造成危險。
	切勿使用任何物件遮蓋蒸氣口、產品表面及底部，否則可能產品損壞及造成危險。
	使用時，切勿打開上蓋、移動或搖晃產品，以免造成危險。
	切勿在進風口或隙縫間插入任何物件，否則可能會導致觸電或因操作故障導致受傷。
	定期檢查及清潔產品、進風口、過濾網及插頭，並清除所有灰塵，以免造成產品故障。
	切勿在狹小空間使用產品，以免因蒸氣熱度，而導致控制面板、插頭及產品損壞及變色。
	使用時及移動時，切勿觸碰上蓋及蒸氣口，避免意外打開上蓋而導致燙傷及造成危險。
	為了維持產品的功能與性能，產品中設有進風口，但偶爾會有昆蟲等進入進風口，使產品發生故障。注意清潔。
	在插入或拔除插頭時，用手握穩插頭本身，不要抓住電源線。
	切勿在產品加裝定時開關或獨立的遙控系統操作。
	使用前，確定產品內外表面清潔乾爽，否則可能引致故障。



	水位高度不要超過” MAX” 最高水位線，以防水流入出風口，損壞內部零件。
	切勿在電源線上放重物、夾住、改裝、用力拉扯或扭曲電源線。切勿在電源線纏結的情況下使用或將電源線懸掛在桌子、櫥櫃的邊緣或讓它接觸灼熱的表面，否則可能造成電源線的損壞。
	切勿在以下環境使用產品： - 潮濕或近水的環境; - 被陽光直接照射或靠近熱源或高溫的環境如焗爐附近; - 在不平穩的表面上; - 易燃物料或不耐熱物品附近(如枱布、窗簾及毛巾等)。
	切勿使用有殘缺或鬆動的插座。使用前，確保機身插頭及電源插頭已充分擦乾。
	使用後，從電源插座拔出插頭及待產品冷卻後才移動、清潔或檢查產品。

## 2. 清潔及儲存

1. 清潔前，必須拔除電源插頭，並待產品完全冷卻。
2. 機身組件、蓋子、烘乾支架可用溫和清潔劑及海綿等軟性物料清潔，用擰乾的濕布抹淨，然後擦乾。
3. 切勿將電源線、插頭或底座浸在水中清潔或在水龍頭下沖洗。
4. 清潔底座時，切勿將水濺入出風口及電路板內。
5. 為免發熱盤內有水垢產生，可使用蒸餾水，並建議每天清洗發熱盤，以免水垢形成。
6. 如產品內部表面、機身、蓋子或發熱盤有污漬，可用濕布抹淨，再用乾布抹乾。
7. 切勿使用有毒或含腐蝕性的清潔劑或粗硬的潔具(如鋼絲刷)進行清潔。
8. 如水垢已產生，可在發熱盤加入白醋與水1:2混合，加熱2-3分鐘，關機浸泡約15分鐘，倒掉後用清水及海綿或軟毛刷洗刷乾淨。

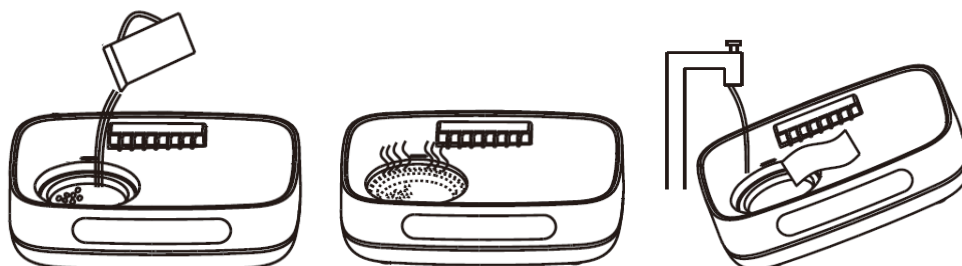**注意:** 洗刷時，切勿將水濺入出風口及電路板內。



9. 按箭嘴及圖標方向 ，順時針轉動過濾網蓋以拆除過濾網蓋。取出過濾網清洗，清洗後，把乾爽的過濾網放回原處。蓋上過濾網蓋，按箭嘴及圖標方向 ，逆時針轉動過濾網蓋，直至聽到「咔」一聲以安裝過濾網蓋。


10. 過濾網可用溫和清潔劑及海綿等軟性物料清潔，然後擦乾。
11. 每15天清洗一次底座的過濾網，避免影響烘乾效果及保持產品清潔。
12. 長時間使用後，機身表面可能會變色，此乃正常現象並不會影響產品安全及使用。
13. 儲存時，切勿將電源線纏繞在產品四周或壓住電源線，以免造成電源線損壞，並將產品放入紙箱並放置在乾爽的環境中。

### 3. 產品規格

型號	RB-B6SD
額定電壓	220-240 伏特~ 50 赫茲
額定功率	消毒: 710-840 瓦 烘乾: 170 瓦
容量 (約)	9 升 (6 套奶瓶(包括所有其配件))
淨重 (約)	2 公斤
產品尺寸 (闊 x 深 x 高) (約)	302 x 232 x 277 毫米

## 4. 產品說明

### 4.1 各部件的名稱和配件

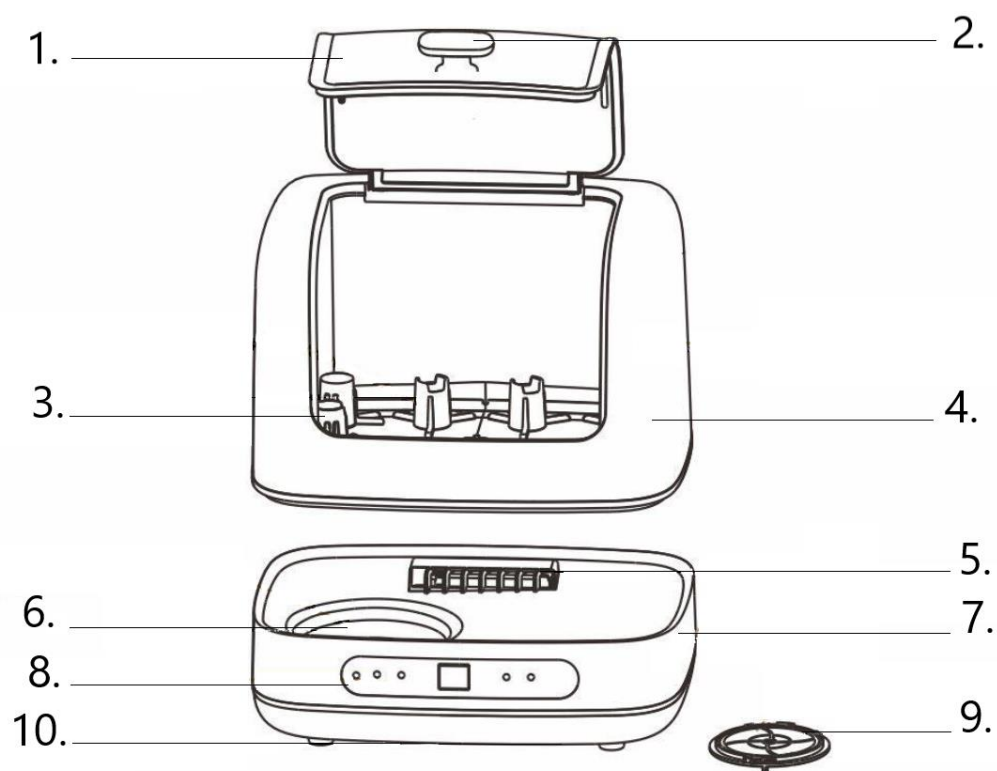


( 以上產品圖僅供參考，以實物為準)

- |         |             |
|---------|-------------|
| 1. 蓋子   | 6. 發熱盤      |
| 2. 提手   | 7. 底座       |
| 3. 烘乾支架 | 8. 操作面板     |
| 4. 機身   | 9. 過濾網蓋及過濾網 |
| 5. 出風口  | 10. 進風口     |



## 4.2 控制面板

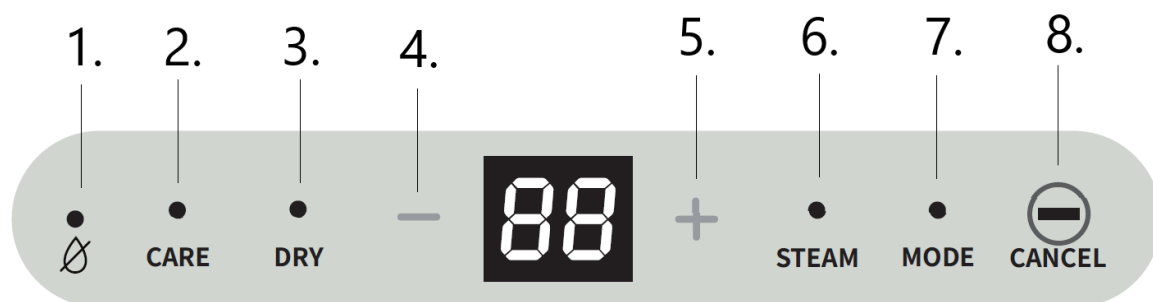


(以上面板圖僅供參考，以實物為準)

1. 缺水指示燈
2. 【儲存】鍵及儲存指示燈
3. 【烘乾】鍵及烘乾指示燈
4. 【-】鍵
5. 【+】鍵
6. 【消毒】鍵及消毒指示燈
7. 【模式】鍵及模式指示燈
8. 【取消】鍵

## 5. 使用方法

### 5.1 基本操作

1. 使用前，先將機身、蓋子、烘乾支架等可能與母嬰用品接觸的部份清洗乾淨。
2. 將底座水平放置，把水注入發熱盤，接著將機身水平地放置在底座上。把奶瓶倒插入機身內的烘乾支架上，把奶嘴、瓶蓋等配件也放於機身內，然後蓋上蓋子。  
**注意：**放上奶瓶前，先把烘乾支架的卡位對準機身內洞位插入，順時針旋轉以扣緊。
3. 接通電源，產品會發出提示聲，所有指示燈亮起，顯示屏顯示“- -”後，指示燈熄滅，產品處於待機狀態。

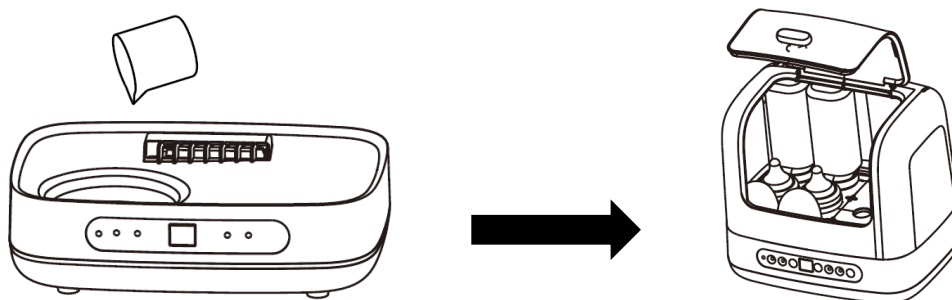


**注意:** 母嬰用品或其他將放入產品消毒的物件需最少耐高溫攝氏 98 度。

**注意:** 水位高度不要超過“MAX”最高水位線，以防水流入出風口，損壞內部零件。

**注意:** 如只使用「烘乾」功能，不需要加水。如使用「消毒」或「模式」功能，但沒有加水入發熱盤，缺水指示燈常亮，顯示屏顯示“E2”。用戶需加水入發熱盤，再按「消毒」或「模式」鍵啟動功能。

**注意:** 若缺水指示燈常亮 10 小時仍無操作，產品自動返回待機狀態。

**注意:** 因天氣等原因，消毒時間長短也有所不同，建議每次消毒加水至“MAX”最高水位線。

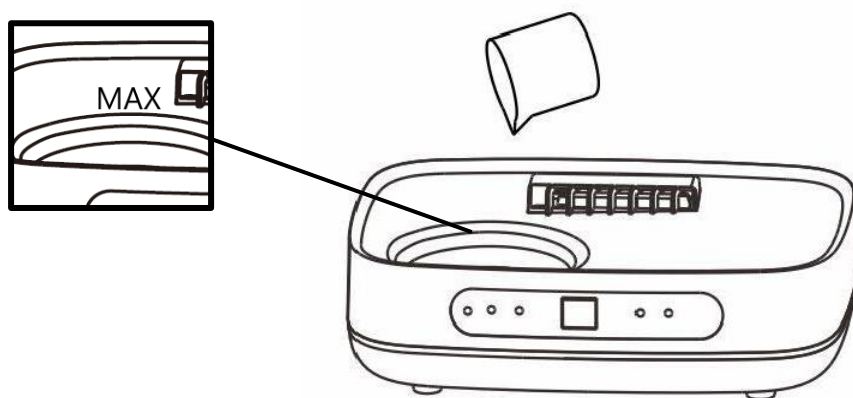

## 5.2 消毒功能

待機狀態下，按「消毒」鍵，消毒指示燈常亮，進入消毒模式。顯示屏顯示“[ ]”

順時針旋轉閃爍，表示發熱盤正在加熱，消毒模式啟動。消毒結束後，產品會進入排氣模式，以排出機身內殘留的水蒸汽，顯示屏顯示剩餘時間。「消毒」功能結束，指示燈熄滅，顯示屏顯示“- -”並返回待機狀態。由於產品處於過熱保護狀態，需閒置 3 分鐘才可再次啟動「消毒」功能。

**注意:** 「消毒」功能是不可調節時間，默認將水燒乾，或最長加熱 15 分鐘後會自動停止加熱工作。

## 5.3 烘乾功能

待機狀態下，按「烘乾」鍵 1 次，烘乾指示燈閃爍白光，顯示屏顯示“60”，表示「標準烘乾」功能將開始；待機狀態下，按「烘乾」鍵 2 次，烘乾指示燈閃爍藍光，顯示屏顯示“30”，表示「快速烘乾」功能將開始。用戶此時可按【+】【-】鍵調節烘乾時間，單位為 5 分鐘，可調節範圍為 15-80 分鐘。在指示燈閃爍時循環按「烘乾」鍵可切換標準/快速功能。選定功能及時間後，靜候 5 秒，「烘乾」功能

啟動，指示燈常亮。顯示屏顯示烘乾剩餘時間。「烘乾」功能結束後，可重新選擇「烘乾」功能，延長烘乾時間。

**注意：**如只使用「烘乾」功能，不需要加水。

**注意：**烘乾效果可能會因環境溫度、濕度及母嬰用品而異。如有需要，可再次執行「烘乾」功能。

## 5.4 模式功能 (消毒+烘乾)

待機狀態下，按「模式」鍵 1 次，模式指示燈閃爍白光，顯示屏顯示“60”，表示標準消毒烘乾功能將開始；待機狀態下，按「模式」鍵 2 次，模式指示燈閃爍藍光，顯示屏顯示“30”，表示快速消毒烘乾功能將開始。用戶此時可按【+】【-】鍵調節烘乾時間，單位為 5 分鐘，可調節範圍為 15-80 分鐘。在指示燈閃爍時循環按「模式」鍵可切換標準/快速功能。選定功能及時間後，靜候 5 秒，「模式」功能

啟動，指示燈常亮。顯示屏顯示“[ ]”順時針旋轉閃爍，表示發熱盤正在加熱，消毒模式啟動，待水燒乾後會自動進入烘乾模式。「模式」功能結束後，可重新選擇「烘乾」功能，延長烘乾時間。

**注意：**如加熱 15 分鐘後，水仍未燒乾，產品會自動進入烘乾模式。顯示屏顯示剩餘烘乾時間。

## 5.5 儲存功能

待機狀態下，按「儲存」鍵，儲存指示燈閃爍，顯示屏顯示“12”，單位為小時。用戶此時可按【+】【-】鍵調節時間，可調節範圍為 2-48 小時，每次按【+】【-】鍵 1 次以增加或減少時間 2 小時。長按【+】或【-】鍵進入快速時間選擇。選定功能及時間後，靜候 5 秒，「儲存」功能啟動，指示燈常亮。「儲存」功能啟動後，每隔 1 小時，產品會烘乾 5 分鐘。

## 6. 故障排除

故障現象	原因	解決方法
顯示屏不著	檢查是否已連接電源。	檢查電源線是否完好，以及是否完全插入電源插座。
不能啟動「消毒」功能	1. 「消毒」功能是否剛結束。 2. 檢查是否已加水入發熱盤。	1. 由於產品處於過熱保護狀態，需等待3分鐘才可再次啟動「消毒」功能。

		2. 加水入發熱盤，再按「消毒」鍵啟動功能。
不能啟動「烘乾」功能	1. 檢查是否有異物堵塞進風口或過濾網。 2. 風機故障。	1. 清理進風口及過濾網的異物或灰塵。 2. 聯絡信興電器服務中心有限公司進行檢查及維修。
顯示屏顯示 E2	缺水提示。	需加水入發熱盤，再按「消毒」或「模式」鍵啟動功能。

如使用以上方法仍未能解決故障，立即停止使用，並聯絡信興電器服務中心有限公司進行檢查及維修。

## 7. 特別聲明

1. 此說明書所有內容經過核對，如有任何印刷錯誤或內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀及規格以廠方生產資料為準。
3. 使用說明書的電子副本可以經電子郵件發送至用戶，如有需要，可致電信興電工工程有限公司：2861 2767。

## 8. 售後服務

信興電工工程有限公司授權信興電器服務中心有限公司(“服務中心”)提供一年保修服務並由發票/換購收據上的日期起計。服務中心保留所有更改保修條款的權利，恕不另行通知，有關保修條款詳情，可參閱本公司網站。

Thank you for choosing Rasonic product. Read the operation manual carefully before use and keep it for your future reference.



## **Table of Contents**

1. Important Safeguards
2. Cleaning and Storage
3. Product Specifications
4. Product Descriptions
5. Operation Instructions
6. Troubleshooting
7. Special Avowal
8. After Sales Service



# 1. Important Safeguards




When using the appliance, follow the below safety precautions:












The following chart indicates the degree of damage caused by wrong operation.

 <b>WARNING</b> Indicates that may cause death or serious injury.	 <b>CAUTION</b> Indicates hazards that may cause human injuries or property damages.
---	--

The following symbols can distinguish the instruction types that need to be strictly followed.

 <p>These symbols mean prohibition.</p>	 <p>These symbols mean requirement that must be followed.</p>
---	---

 <b>WARNING</b>	
	To avoid danger, use the appliance only as described in the operation manual. Do not use it or any part of the appliance outdoors or out of the intended purpose. Misuse can cause potential injury.
	Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Children being supervised not to play with the appliance. Keep the appliance and its power cord out of reach of children aged less than 8 years.





	Before use, make sure the power plug is plugged in on the power socket tightly.
	Never leave the appliance unattended when in use.
	Do not use other things to substitute the original drying rack, or it will cause danger.
	Clean the appliance after use. Must not immerse the appliance, power cord or plug in water or let them wet, it can cause electric shock or fire.
	Do not touch, plug in or remove the plug with wet hands, it can cause electric shock.
	To avoid burn, do not get your face or hands close to the steam vent during use or right after use; never touch the heating plate surface which is subject to residual heat right after use.
	The appliance is intended to be used in household and similar applications such as staff kitchen in shops, offices and other working environments; by clients in hotels, motels and other residential type environments.
	Do not attempt to modify the appliance by yourself or repair with any unauthorized parts, otherwise it will cause hazards and the warranty will become invalid.
	Make sure the voltage indicated on the label of the appliance is the same as your local supply. Also, avoid plugging other devices into the same outlet to prevent electric overheating.
	This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
	Always check the condition of the appliance, power cord and plug. If any damage is found, stop using the appliance immediately to avoid hazard and contact Shun Hing Electric Service Centre Limited to check and repair.



## CAUTION

	Fully unwind the power cord each time before use. Do not use the same socket with other high power consumption appliance or use the extension cord beyond its capacity to avoid danger caused by overload.
	Do not cover the steam vent, appliance surface and bottom with any objects, so as not to cause appliance damage and danger.
	Do not open the lid, move or shake the appliance when in use, it can cause danger.
	Do not insert any object in the intake vent or gaps, it may cause electric shock or injury caused by malfunction.
	Regularly check and clean the appliance, intake vent, filter and plug, and clean their dust to avoid the appliance malfunction.
	Do not use the appliance in a small space where steam is confined within a closed space, or it may cause control panel, plug and appliance damage and discoloration due to the heat of steam.
	When use and move the appliance, do not touch the lid and steam vent, resulting in a burn and cause danger due to opening the lid accidentally.
	To maintain the appliance function and performance, the intake vent is designed on the appliance. In rare cases, insects may enter these holes and cause a malfunction. Pay attention to clean.
	Grasp the plug itself when plug in or remove the plug, do not grasp the power cord.
	The appliance is not intended to be operated by means of an external timer or separate remote control system.
	Make sure the appliance outer surface and inside surface are clean and dry before use, or it may cause malfunction.
	Water cannot exceed the maximum water level "MAX" , to prevent splash water into outtake vent and avoid damaging the parts.






	<p>Do not place heavy objects on the power cord. Never clip, modify, stretch or twist the power cord. Do not operate the appliance when the power cord is tangled or hangs over the edge of a table, counter-top or let it touch any hot surface, it may damage the power cord.</p>
	<p>Do not operate the appliance in following places:</p> <ul style="list-style-type: none"> <li>- Humid environment or near water;</li> <li>- Exposed to sunlight, near heat sources or high temperature place such as near an electric oven;</li> <li>- Unstable surface;</li> <li>- Near flammable or non-resistant to heat objects (e.g. table cloth, curtain and towel etc.).</li> </ul>
	<p>Do not use deficient or loose socket. Make sure the power connector and plug are dry before use.</p>
	<p>After use, remove the plug from the power socket and let the appliance cool down before moving, cleaning or checking.</p>

## 2. Cleaning and Storage

1. Before cleaning, must unplug the appliance and let it cool down completely.
2. Main body, lid, drying racks can be cleaned by soft material such as sponge and mild detergent, wipe it with a wrung wet cloth and dry it.
3. Do not immerse the power cord, plug and the base into water or rinse under the tap.
4. Do not splash water into outtake vent and circuit board when cleaning the base.
5. Avoid forming of water scale in heating plate, distilled water is preferred to use. It is suggested to clean the heating plate every day to avoid water scale formation.
6. If there are stains on the surface, main body, lid or heating plate of appliance, wipe it with a wrung wet cloth and dry it.
7. Never use poisonous or corrosive detergent, or clean with harsh cleaning tools (e.g. metal-wired brush) for cleaning.
8. If water scale is found, add some white vinegar and water ratio 1:2 in heating plate and heat for 2-3 minutes. Soak around 15 minutes, then rinse thoroughly with clean water and sponge or soft brush after pouring out.

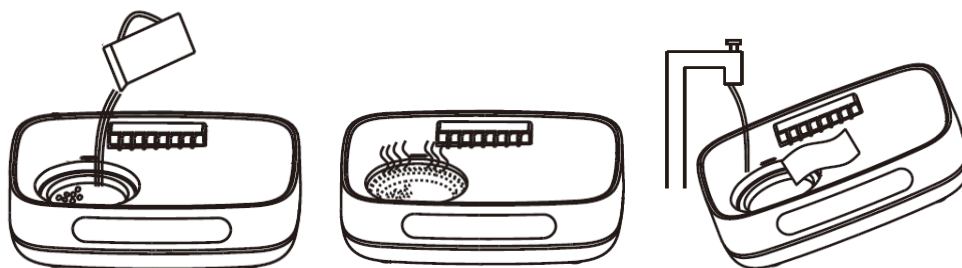**CAUTION!** Do not splash water into outtake vent and circuit board when washing.




9. Rotate filter cover clockwise according to the arrow and icon direction  to remove the filter cover. Take out filter for cleaning, place the dry filter back in its original position after cleaned. Place the filter cover on, according to the arrow and icon , rotate the filter cover anti-clockwise, till hear a 'click' sound, the filter cover is installed.
10. Filter can be cleaned by soft material such as sponge and mild detergent, then dry it.
11. Wash the filter every 15 days, so as to avoid the effect of steam and keep the appliance clear.
12. The color of appliance' s surface may change after using a period of time, however it does not affect the safety and function of the appliance.
13. When store, never wrap the power cord around the appliance or clip the power cord, it is to prevent the power cord from deterioration. Put the appliance into a box and store in a dry place.

### 3. Product Specifications

Model	RB-B6SD
Rated Voltage	220-240V ~ 50Hz
Rated Power	Sterling: 710-840 W Drying: 170 W
Capacity (Approx.)	9L (6 baby bottles and its accessories)
Net Weight (Approx.)	2 kg
Product Size (W x D x H) (Approx.)	302 x 232 x 277 mm

## 4. Product Descriptions

### 4.1 Parts Name and Accessories

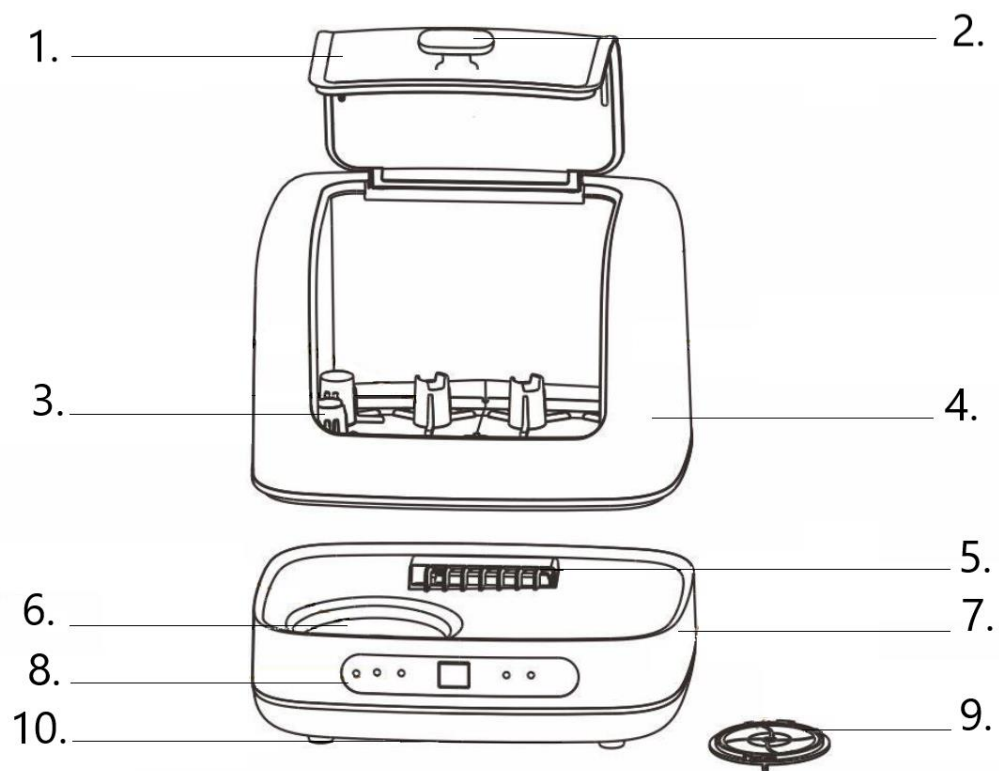

(Above product diagram is for reference only, appearance refers to actual product.)

1. Lid

6. Heating plate

2. Handle

7. Base

3. Drying rack

8. Control panel


4. Main body

9. Filter cover and filter

5. Outtake vent

10. Intake vent

## 4.2 Control Panel

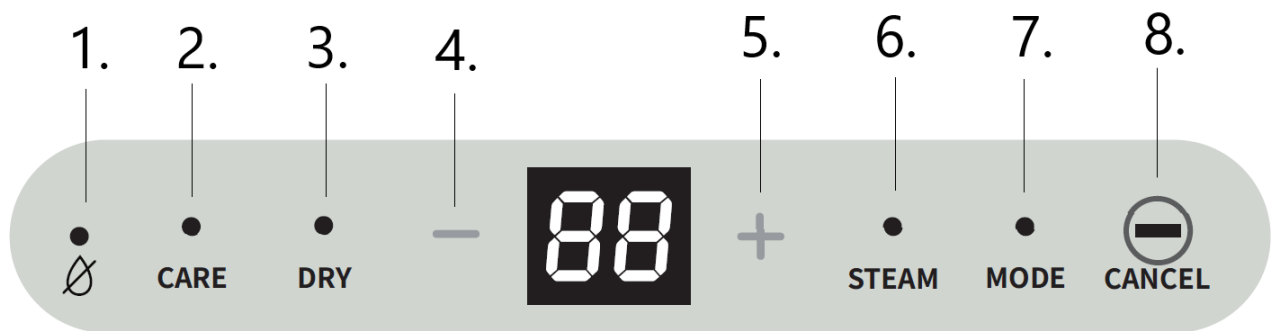

(Above control panel diagram is for reference only,

appearance refers to actual product.)

1. Refill indicator
2. 【CARE】 key and indicator
3. 【DRY】 key and indicator
4. 【-】 key
5. 【+】 key
6. 【STEAM】 key and indicator
7. 【MODE】 key and indicator
8. 【CANCEL】 key


## 5. Operation Instructions

### 5.1 Basic Operation

1. Before using, completely cleaning the main body, lid, drying racks and any parts that might contact with baby products.
2. Keeping the base in a horizontal placement, fill water into heating plate, then put the main body on top of the base horizontally. Reverse milk bottle and put onto the drying racks, put pacifier, bottle cap and other accessories into main body. Then close the lid.

**CAUTION!** Before putting milk bottles onto drying racks, insert the buckle of drying racks into corresponding hole inside main body, turn clockwise to lock it.

3. Connected the power, the appliance will have a beep sound, all indicators light up, the display shows “- -” . After that, all indicators will off, the appliance is in standby status.

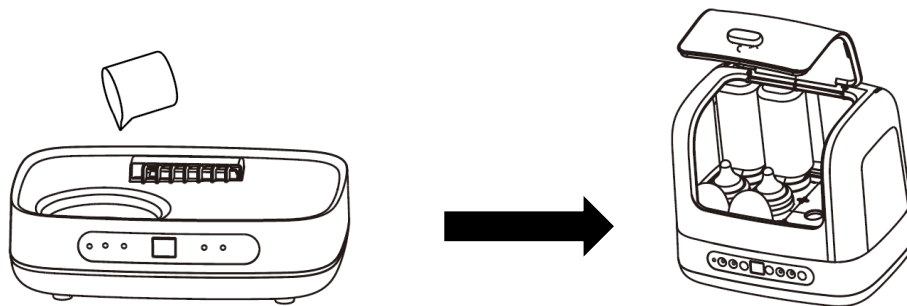


**CAUTION!** Baby products and any objects will be steamed should be high temperature resistant at 98 degrees Celsius minimum.

**CAUTION!** Water cannot exceed the maximum water level “MAX” , to prevent splash water into outtake vent and avoid damaging the parts.

**CAUTION!** If “DRY” function is used, no need to fill water. If user use “STEAM” or “MODE” functions, but no water in heating plate, refill indicator lights up and display shows “E2” . User need to add water to heating plate, and press “STEAM” or “MODE” key to activate corresponding functions.

**CAUTION!** If refill indicator lights up over 10 hours without action, appliance will back to standby status.

**CAUTION!** The processing time of “STEAM” function depends on the weather, it is suggested adding water to “MAX.” the maximum water level every time.

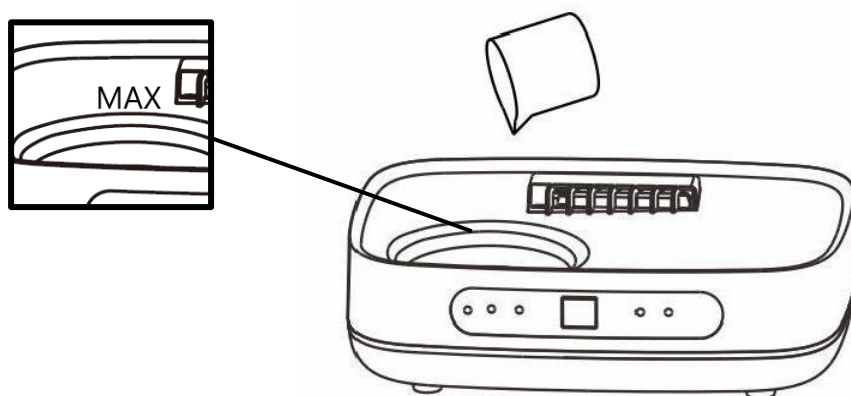

## 5.2 STEAM function

Under standby status, press “STEAM” key, “STEAM” indicator lights up, the appliance is in “STEAM” function. Display shows “[ ]” turning clockwise with flashing that means heating plate is heating and “STEAM” function is working. After steamed, appliance will enter exhaust mode for releasing remaining water vapor, display shows remaining time. When whole process finished, indicator will off,

display shows “- -” and back to standby status. As appliance is in overheat protection status, user need to wait 3 minutes for restarting “STEAM” function.

**CAUTION!** No time adjustment is allowed in “STEAM” function. It defaults burning dry all water, or heating maximum 15 minutes, then appliance will stop heating.

### 5.3 DRY function

Under standby status, press “DRY” key once, “DRY” indicator flashes in white.

Display shows “60” that means “Regular DRY” function will be started; under standby status, press “DRY” key twice, “DRY” indicator flashes in blue. Display shows “30” that means “Quick DRY” function will be started. User can press 【+】

【-】key to adjust drying time, 5 minute as the unit, adjustable range is 15-80 minutes.

When indicator is flashing, press “DRY” key to switch between “Regular DRY” and “Quick DRY” function. Confirmed function and time, wait 5 seconds, “DRY” function starts, indicator lights up. Display shows remaining time. “DRY” function finished, user can choose “DRY” function and extend drying time.

**CAUTION!** If “DRY” function is used, no need to fill water.

**CAUTION!** The drying performance may vary depends on the ambient temperature, humidity and the baby products. If necessary, restart the “DRY” function.

## 5.4 MODE function (STEAM + DRY)

Under standby status, press "MODE" key once, "MODE" indicator flashes in white. Display shows "60" that means "Regular MODE" function will be started; under standby status, press "MODE" key twice, "MODE" indicator flashes in blue. Display shows "30" that means "Quick MODE" function will be started. User can press **【+】【-】** key to adjust drying time, 5 minute as the unit, adjustable range is 15-80 minutes. When indicator is flashing, press "MODE" key to switch between "Regular MODE" and "Quick MODE" function. Confirmed function and time, wait 5 seconds, "MODE" function starts, indicator lights up. Display shows "C]" turning clockwise with flashing that means heating plate is heating and "STEAM" function is working. Appliance will enter "DRY" function automatically when water is burn dry. When "MODE" function finished, user can choose "DRY" function and extend drying time.

**CAUTION!** If there is still water in heating plate after heating 15 minutes, appliance will enter "DRY" function automatically. Display shows remaining drying time.

## 5.5 CARE function

Under standby status, press "CARE" key once, "CARE" indicator flashes. Display shows "12", hour as the unit. User can press **【+】【-】** key to adjust time, time range is 2-48 hours. Press **【+】【-】** key each time to increase or decrease 2 hours setting.



Long press 【+】 【-】 key to enter quick time selection. Confirmed function and time, wait 5 seconds, "CARE" function starts, indicator lights up. When "CARE" function is working, appliance will dry for 5 minutes every hour.

## 6. Troubleshooting

Problem	Cause	Solution
Display cannot show	Check if the power is connecting.	Check if the power cord is in good condition and fully inserted into the socket.
Cannot use "STEAM" function	<ol style="list-style-type: none"> <li>"STEAM" function is just finished.</li> <li>Check if there is water in heating plate.</li> </ol>	<ol style="list-style-type: none"> <li>As appliance is in overheat protection status, user need to wait 3 minutes for restarting "STEAM" function.</li> <li>User need to add water to heating plate, and press "STEAM" key to activate the function.</li> </ol>
Cannot use "DRY" function	<ol style="list-style-type: none"> <li>Check if the outtake vent or filter is blocking.</li> <li>Malfunction of the fan.</li> </ol>	<ol style="list-style-type: none"> <li>Remove the blockages or dust of outtake vent or filter.</li> <li>Contact Shun Hing Electric Service Centre Ltd. to check and repair.</li> </ol>
Display show "E2"	Refill notice.	Add water to heating plate, and press "STEAM" or

		"MODE" key to activate corresponding functions.
--	--	---

If the above solutions cannot fix the problem, stop using immediately and contact Shun Hing Electric Service Centre Ltd. to check and repair.

## 7. SPECIAL AVOWAL

1. The information above has been checked; our company reserves the hermeneutic power to any print errors or misunderstanding on the content.
2. Please note that any technology improvement will be added to the new versions of operation manual without any prior notices. The product appearance and specification are subject to the actual appliance.
3. E-copy of operation manual can be sent by e-mail on request, please call Shun Hing Electric Works and Engineering Co., Ltd at 2861 2767.

## 8. AFTER SALES SERVICES

Shun Hing Electric Works & Engineering Co., Ltd. authorizes Shun Hing Electric Service Centre Ltd. ( "SHESC" ) to offer one year warranty service to the product commencing from the date of purchase invoice or redemption voucher. SHESC reserves the right to change the warranty terms without prior notice. For details of the warranty terms, you can refer to our website.



信興電工工程有限公司

SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.

辦公室：香港九龍尖沙咀東部麼地道67號半島中心9樓

電話：2861 2767

圖文傳真：2865 6706

網址：<https://www.shew.com.hk>

電郵：[shew@shunhinggroup.com](mailto:shew@shunhinggroup.com)

Office: 9/F, Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, H.K.

Tel: 2861 2767

Fax: 2865 6706

Website: <https://www.shew.com.hk>

E-mail: [shew@shunhinggroup.com](mailto:shew@shunhinggroup.com)

### 保養及維修 **Maintenance and Repair Service:**

信興電器服務中心有限公司

SHUN HING ELECTRIC SERVICE CENTRE LTD.

香港新界葵涌勝耀街2號信興中心11樓

電話：2406 5666

圖文傳真：2408 0316

網址：<http://www.shesc.com/zh>

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T. H.K.

Tel: 2406 5666

Fax: 2408 0316

Website: <http://www.shesc.com/en>

客戶服務中心

香港新界葵涌勝耀街2號信興中心1樓

九龍尖沙咀東部麼地道67號半島中心B座9樓

澳門慕拉士大馬路193-199號南嶺工業大廈5樓I座

### **Customer Service Centre**

1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.

9/F, Block B, Peninsula Centre, 67 Mody Road, Tsim Sha Tsui East, Kowloon

Avenida de Venceslau de Morais, No. 193-199, 5 andar - 1, Edf. Industrial Nam Leng, Macau

有關最新之香港及澳門客戶服務中心資料，請參閱信興服務中心網址：

<http://www.shesc.com/zh>

For the latest information of Hong Kong and Macau service centre, please visit

<http://www.shesc.com/en>